

Sento-controller



Away / Home mode

When leaving the property, you can activate the "Away" mode with a shortcut, which sets the ventilation to minimum speed.

"Home" mode restores the ventilation speed to the previously set speed level.



Sauna-function

The built-in humidity sensor enhances ventilation automatically as the humidity increases, for example, during sauna sessions. The "Sauna" mode disables the operation of the humidity sensor for the duration defined in the settings.

The humidity sensor resumes normal operation after the "Sauna" mode ends.

The LED is on when the "sauna" mode is active.

If there is no sauna in your apartment, the function has been deactivated (dip2).



Fireplace-function

By clicking to activate the "Fireplace" mode, the space will be pressurized, making it easier to start, for example, a fireplace.

In the settings, you can define the duration of the "Fireplace" mode and the amount of overpressure.

The device returns to normal operation after the "Fireplace" mode ends.

If there is no fireplace in your apartment, the function has been deactivated (dip3).



Boost-function

You can set a temporary boost using the + or - buttons for the desired duration.

The amount of boost can be adjusted from the settings.

The LED is lit at the selected speed.



Speed

The house icon indicates the speed at which the ventilation settings are implemented.

Using the + or - buttons, you can adjust the speed of the device. The orange bar indicates the current airflow in use.

The LED is lit at the selected speed.

The controller's standby mode

The controller enters standby mode 5 minutes after the last press. The LEDs dim slightly from their brightness during use.

When the controller is in standby mode, the first button press deactivates the standby mode, and the next on performs the desired function.



Airfi Oy AB
Piilipuunkatu 11
21200 Raisio, Finland

+358 (0)2 430 3300
www.airfi.fi
info@airfi.fi