
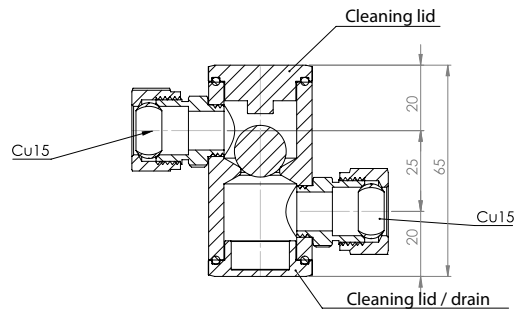


# Water Trap

## Installation Guide

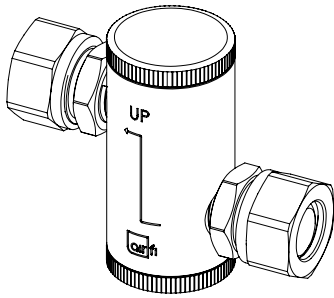

The Airfi Water Trap is designed for draining condensate from all small air handling units. The condensate water flows from the trap to the floor drain using a float within the product. The ball-shaped float prevents airflow back into the trap, making it silent.

The flow direction of the condensate water and the proper orientation of the water trap are laser-marked on both sides of the product, minimizing the risk of incorrect installation.

### Technical specifications

Connection on the unit	1/2 " internal thread
Connections on the water trap	Cu Ø 15 mm.
Min. 10 cm of free space is required under the unit	

## Installation


During installation, ensure that the water trap will be accessible for maintenance and cleaning.

1. The maintenance of the water trap is primarily carried out from above, but if there is enough space, it can also be cleaned from below.
2. Direct the outlet pipe of the water trap to the sewer. During installation, ensure that there are not two water traps in a row.



### Attention!

Install the water trap in the correct orientation. The water flow direction and the top side of the water trap are laser-marked with arrow on its side. Ensure that water flows in the direction indicated by the arrow.

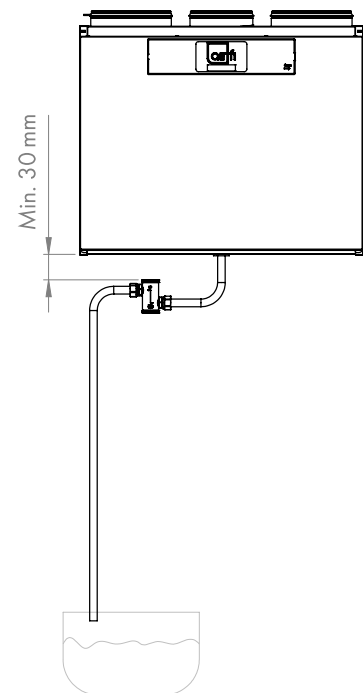

## Maintenance

The water trap should be maintained at least once a year.

1. Unscrew the cleaning cover and remove any debris.
2. Ensure that the float moves freely and clean it as well.