

# Pia-cooker hood

Sound attenuated



## Usage- and servicemanual




1. Timer for damper

2. Lights OFF/ON

## Cooking

Turn the dampers timer (1.) clockwise before cooking. Keep the damper closed until cooking.

The timer runs for a maximum of 60 minutes. You can cancel the timer by turning the knob (1.) counter-clockwise.

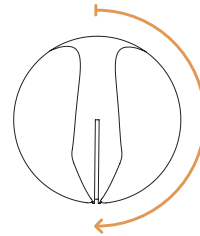

max 60 min.

## Lights

Lights: LED 2x3W 3000K, GU10 fittings. Only use lights approved by Airfi Oy. Cut power to the hood while changing lights.

## Huolto ja pesu

To ensure the function of the cooker hood, the hood must be regularly serviced

Clean the grease filter at least once a month by hand or in the dishwasher. Release the grease filter with the quick-release levers. The colour of the filter might change after washing but this does not affect the performance of the filter.

Use a cleaning agent for painted and plastic surfaces to clean the rest of the hood.



### Note!

Only use lights approved by Airfi Oy.



### Note!

Leaving the filters uncleaned is a fire hazard.



### Note!

Open flames beneath the hood is strictly forbidden.