

Airfi Uno controller

Installation manual

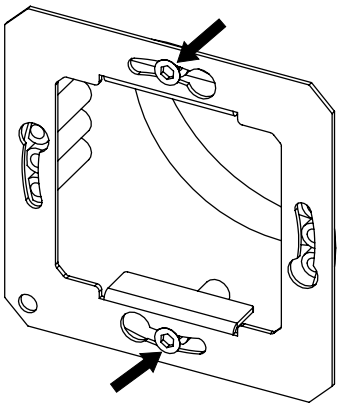


1 Place mounting frame according to the picture. Fasten with mounting screws top and below (arrows in the picture).

Wiring sequence according to the print on the Airfi units external junction box.

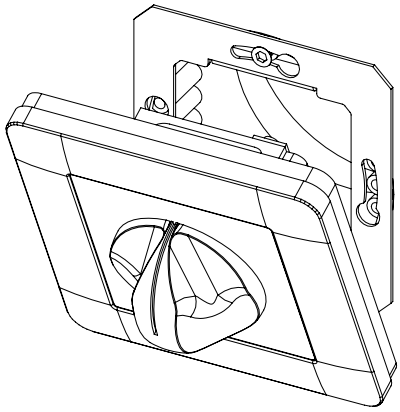

2 Position lower metal spring and push it towards the wall.

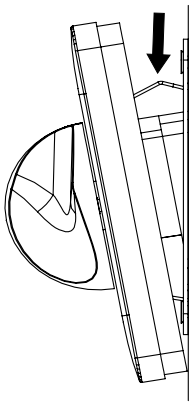

3 If necessary you can push the top spring (arrow in the picture).

Remove Uno controller by pulling the top part away from the wall.


Airfi Oy AB
Piilipuunkatu 11
21200 Raisio, Finland

02 430 3300
www.airfi.fi
info@airfi.fi



40000040

Controller wiring

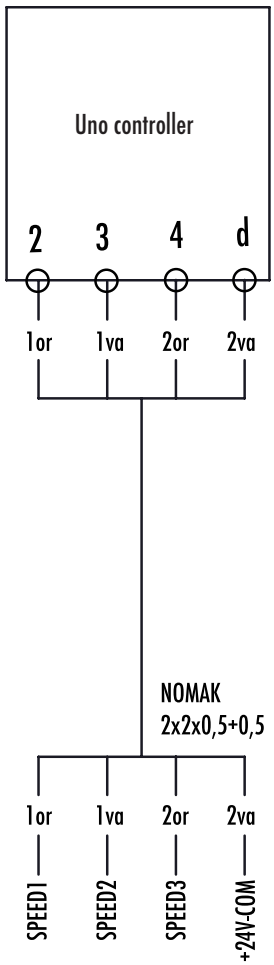

In the junction box remove the jumper wire between Speed1 and +24COM.

60800571D1 –We reserve the right to make changes. All rights reserved.